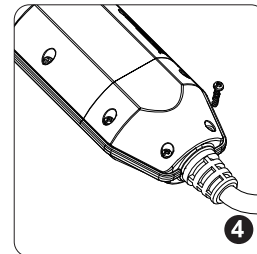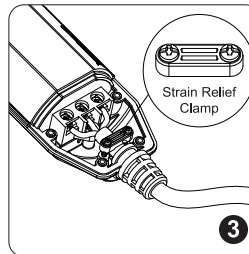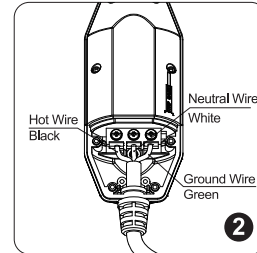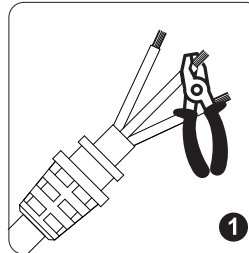# ELEGRP INSTALLATION INSTRUCTIONS

1. Insert the cable into a suitable rubber grommet and remove the insulation from each circuit conductor approx. 2/5" (10mm).

   One grommet is provided per each wire gauge: 14AWG, 16AWG and 18AWG SJTW/SJTOW/SJOW

2. Insert hot wire (black) into the hole under the brass-colored screw. Insert neutral wire (white) under the silver-colored screw. If applicable, insert ground wire (green) under the green-colored screw. Tighten the screws clockwise.

3. Install the strain-relief clamp over the outer cable exterior to help prevent a pulling force from pulling the wires out from the screws that are supplying the electricity.

4. Install the rear cover and tighten up the screws to finish installation.

   Test the device and make sure the green indicator light is ON before using. **DO NOT USE IF TEST FAILS!**
a) Plug the device into power source, the green indicator light is ON.
b) Press TEST button, the green indicator light is OFF.
c) Press RESET button, the green indicator light is ON.

Hot Wire Black
Neutral Wire White
Ground Wire Green

Strain Relief Clamp

100mm

145mm